

How to set up your new Pet Exercise Pen




Step 1:

From the flat position, lift pen upright so that the black plastic feet are resting on the floor.

Step 2:

Open up the panels to form the desired shape (see below for options) and bring the two end panels together. Fasten the two door panels with the three door clips and tighten straps to secure.

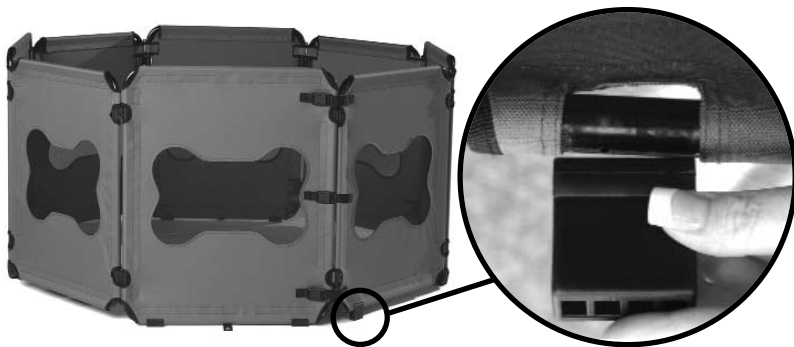

Step 3:

Attach the separate black plastic foot to the lower bar of the right door panel by aligning the center molded pin to the hole located on the underside of the steel frame and push on to secure.

Three fun configurations!



5 Ft. Circle




6 Ft. x 2 Ft. Run



4 Ft. Square

Connect two or more for larger Exercise Pens!

Important Safety Tips:

- Remove your pet's leash and collar prior to placing them in their crate to prevent accidental choking. 
- ONLY PETS THAT HAVE BEEN PROPERLY CRATE TRAINED SHOULD BE PLACED IN ANY EXERCISE PEN.
- Leaving a pet unattended for any length of time may cause anxiety for the pet and cause them to scratch or chew to escape. This can be very dangerous and possibly cause serious injuries or death.
- Choose the appropriate size pen for your pet. Your pet should not be able to jump over the sides of the pen.
- Follow all assembly instructions. Improperly assembled pens can be dangerous.

Should damage occur to the fabric portion of your pet's exercise pen, replacement panels are available for purchase.

Website:
www.firstrax.net

Email:
petproducts@firstrax.net



18-A Journey, Suite 130
Aliso Viejo, CA 92651
(949) 360-1840

Smart Advice:

Although this is an extremely well made product, no fabric pen will contain a pet that chews or scratches to get out. Do not use this product with aggressive, dangerous or untrained animals. Do not leave your pets unattended for long periods of time. Always use good judgment and follow all instructions when using this product. FIRSTRAX, Inc. is not responsible for any damage caused by aggressive, destructive, immature or untrained animals.